



# SARX-110

## Vector Impedance Antenna Analyzer

---

---

### Cumulative Release Notes

Firmware Revision 0.10.13



This document is licensed under a Creative Commons Attribution-NonCommercial-ShareAlike 3.0 Unported License.

© 2011-2018, Melchor Varela - EA4FRB

---

## Contents

1	RELEASE SERIES 0.10.X .....	3
2	RELEASE SERIES 0.9.X .....	7
3	RELEASE SERIES 0.8.7.X .....	10
4	RELEASE SERIES 0.8.6.X .....	12
5	VERSION 0.8.4 .....	17
6	VERSION 0.8.2 .....	19
7	VERSION 0.8.1 .....	20
8	VERSION 0.7.5 .....	22
9	VERSION 0.7.4 .....	23
10	VERSION 0.7.3 .....	24
11	VERSION 0.7.2 .....	25
12	VERSION 0.7.1 .....	26
13	VERSION 0.7.0 .....	27
14	VERSION 0.6.6 .....	28
15	UPGRADING THE FIRMWARE.....	29
16	LICENSE AGREEMENT.....	30

## 1 Release series 0.10.x

**v0.10.13 - Release date:** Dec 11<sup>th</sup>, 2018

**New features:**

- Added Analog Meters display to Single Frequency mode.

**Enhancements:**

- Changed the power level bar indicator by an analog meter style indicator in signal generator mode.

**Bug fixes:**

- The first grid line of the graph is missing in the Cable Test mode.

**Changes:**

- Changed VSWR limit for red color indication to 3.0.

**v0.10.12 - Release date:** Nov 15<sup>th</sup>, 2018

**Enhancements:**

- Improvements in detector calibration algorithm slightly improve the accuracy for certain measurements. Detector calibration procedure requires now a 50-ohm load in addition to the 0-ohm load. The change does not affect the stored calibration, but the improvement in accuracy will be applicable after performing the Detector Calibration and then the OSL Calibration.

**v0.10.11 - Release date:** Oct 21<sup>st</sup>, 2018

**Enhancements:**

- Cable test:
  - Added capability for setting the number of measurement points for cable test mode; select <Setup><Points TDR> to access to the setting. Reducing the points speeds up the scan speed but changes the resolution of the measurements.
  - Added the display of Z (derived from step value).
  - Performed improvements in the processing algorithm, which are more noticeable for short cable lengths.
- Outliers seen when using SARK Plots and average setting of 4 in high-res measurements.

**v0.10.10 - Release date:** Oct 1<sup>st</sup>, 2018

**Enhancements:**

- Added combined display of “Xs,Rs” or “Xp,Rp” for the right axis in Scalar Chart mode.
- Improved averaging algorithm (when using SARK Plots and >8 samples).

#### **v0.10.9 - Release date: Jan 3<sup>rd</sup>, 2018**

##### **Enhancements:**

- Layout re-arrangements in Smith chart mode for increasing the size of the chart.
- Improved interpolation algorithm for OSL calibration.

##### **Bug fixes:**

- Not possible to change between START/STOP and FREQ/SPAN in Field mode. Also, **File** + Press Navigator A shortcut (data file save) not working in this mode.
- Transmission line length and Signal Generator level changes not automatically saved.

#### **v0.10.8 - Release date: Dec 29<sup>th</sup>, 2017**

##### **Enhancements:**

- Improved response time after selecting Main menu option.
- Increased the Main menu time from two to five seconds.

#### **v0.10.7 - Release date: Dec 28<sup>th</sup>, 2017**

##### **Enhancements:**

- Save Conf. [▲] button can be used to open Mode menu – this button will no longer be used to save the configuration as it will be done automatically.
- Save Screen [●] button can be used to open Setup Menu; you must press the button for a few seconds.
- State and settings are all now automatically saved, without the need of pressing Save Conf. [▲] button. Notice that the saving of some user actions such as changing marker positions are delayed for 10-seconds.
- Sweep scan interrupted by user action will continue from previous position –in previous versions the scan was restarted.
- Smoother movement of markers while in run mode.
- Main menu active option is now independent for each mode.
- New x4 MEAS\_RX command in remote mode.

##### **Bug fixes:**

- Omitted line in sweep modes when two consecutive data points are located in opposed out-of-chart areas.

**v0.10.6 - Release date: July 24<sup>th</sup>, 2017****Enhancements:**

- Added <Marker n> <Data>, which allows selecting the shown data values at the marker position from the following choices: plotted values, Z rectangular form, Z polar form, Rho rectangular form or Rho polar form.

**v0.10.5 - Release date: June 15<sup>th</sup>, 2017****New features:**

- Added “RX Mode” to Signal generator.

**Enhancements:**

- OSL Profile menu shows the profile names (when set).

**v0.10.4 - Release date: May 30<sup>th</sup>, 2017****New features:**

- Added “Save Data File” operation in Single Frequency mode for saving measured data at a user specified time interval.

**Enhancements:**

- Slight speed improvement in the main menu display.

**v0.10.3 - Release date: May 26<sup>th</sup>, 2017****Enhancements:**

- Increased the Main menu time from one to two seconds.

**v0.10.2 - Release date: May 19<sup>th</sup>, 2017****Enhancements:**

- Added display of main menu. Main menu automatically pops up when pressing Navigator A (left or right). This feature can be enabled or disabled from the Setup menu.
- Band Scan frequency and marker settings independent of other sweep modes.
- Smith Chart displays START/STOP or FREQ/SPAN depending on selected frequency enter mode.
- More selective display of sampling and filter settings on the status windows for the different modes.

**Bug fixes:**

- Smith Chart markers window cleared after selecting a menu, only if presenting the plot of a saved file –it did not happen in run mode.

#### **v0.10.1 - Release date: May 14<sup>th</sup>, 2017**

##### **Enhancements:**

- Reverted back Field mode.
- Bigger Smith Chart.
- Changed markers shapes to icon type
- <Setup><Sampling>: additional fast low-resolution modes:  $\frac{1}{4}$  and  $\frac{1}{8}$  resolution
- Used bigger fonts for Circuit Model results.
- Cable Test mode:
  - Markers preserve position when zooming.
  - Added Max and Min automatic marker tracking modes.
  - Automatic scale.
  - Increased the Y scale range limits for the fixed scale.

##### **Bug fixes:**

- Disabling marker tracking still show previous tracking mode on markers window
- Residues of the Setup menu if exiting without selecting an option in Cable test mode.
- Screenshot bitmap file not deleted if cancelled the operation.
- X axis deleted when changing Y scale (when not using the menu) in Scalar Chart mode.
- Spurious Disabled option in tracking marker menu.
- Missing Frequency legend in Matching Networks mode.

#### **v0.10.0 - Release date: May 7<sup>th</sup>, 2017 (Beta)**

##### **Enhancements:**

- Major redesign of the display elements for improved legibility.

##### **Removed features:**

- Removed Field Mode.

## 2 Release series 0.9.x

**v0.9.5 - Release date:** Dec 13<sup>th</sup>, 2018

**New features:**

- Added Analog Meters display to Single Frequency mode.

**Enhancements:**

- Changed the power level bar indicator by an analog meter style indicator in signal generator mode.

**Bug fixes:**

- The first grid line of the graph is missing in the Cable Test mode.

**Changes:**

- Changed VSWR limit for red color indication to 3.0.
- Changed max. level of VSWR bar in Single Frequency mode to 6.0 to be consistent with new analog meter scale.

**v0.9.4 - Release date:** December 1<sup>st</sup>, 2018

**Notes:**

- Backported most of the enhancements implemented in v0.10.x series (up to v0.10.12) but keeping the screens format of v0.9.x series.

**Enhancements:**

- Improvements in detector calibration algorithm slightly improve the accuracy for certain measurements. Detector calibration procedure requires now a 50-ohm load in addition to the 0-ohm load. The change does not affect the stored calibration, but the improvement in accuracy will be applicable after performing the Detector Calibration and then the OSL Calibration.
- <Setup><Sampling>: additional fast low-resolution modes:  $\frac{1}{4}$  and  $\frac{1}{8}$  resolution.
- Outliers seen when using SARK Plots and average setting of 4 in high-res measurements.
- Added combined display of “Xs,Rs” or “Xp,Rp” for the right axis in Scalar Chart mode.
- Improved averaging algorithm (when using SARK Plots and >8 samples).
- Used bigger fonts for Circuit Model results.
- Cable Test mode:
  - Performed improvements in the processing algorithm, which are more noticeable for short cable lengths.
  - Markers preserve position when zooming.

- Added Max and Min automatic marker tracking modes.
- Automatic scale.
- Increased the Y scale range limits for the fixed scale.
- Added capability for setting the number of measurement points for cable test mode; select <Setup><Points TDR> to access to the setting. Reducing the points speeds up the scan speed but changes the resolution of the measurements.
- Added the display of Z (derived from step value) in Markers Info.
- Band Scan frequency and marker settings independent of other sweep modes.
- Smith Chart displays START/STOP or FREQ/SPAN depending on selected frequency enter mode.
- Added “Save Data File” operation in Single Frequency mode for saving measured data at a user specified time interval.
- OSL Profile menu shows the profile names (when set).
- Added “RX Mode” to Signal generator.
- Save Conf. [▲] button can be used to open Mode menu – this button will no longer be used to save the configuration as it will be done automatically.
- Save Screen [●] button can be used to open Setup Menu; you must press the button for a few seconds.
- State and settings are all now automatically saved, without the need of pressing Save Conf. [▲] button. Notice that the saving of some user actions such as changing marker positions are delayed for 10-seconds.
- Sweep scan interrupted by user action will continue from previous position –in previous versions the scan was restarted.
- Main menu active option is now independent for each mode.
- New x4 MEAS\_RX command in remote mode.
- Improved interpolation algorithm for OSL calibration.

**Bug fixes:**

- Residues of the Setup menu if exiting without selecting an option in Cable test mode.
- Screenshot bitmap file not deleted if cancelled the operation.
- In Big VSWR display of Single Frequency mode, an upper section of status line is overridden.



**v0.9.3 - Release date: March 3<sup>rd</sup>, 2017****Bug fixes:**

- Signal Generator mode: Some residual of the Setup or Preset menus remain on the screen
- Shift of the frequency readout and Z values by one row when reading .CSV files

**v0.9.2 - Release date: Feb 5<sup>th</sup>, 2017****New features:**

- Added aid for stub tuning

**Enhancements:**

- Markers info:
  - Markers frequency delta show as positive or negative value
  - Add separators for legibility
  - Corrects location in cable test mode

**v0.9.1 - Release date: Dec 22<sup>nd</sup>, 2016****New features:**

- Signal generator: new CW modulation modes (experimental)

**Enhancements:**

- Circuit models, loop/inductor: allow setting a scan frequency upper limit, for inductors with multiple resonance frequencies within the analyzer range
- Signal generator: reduces harmonics in AM/FM modulation modes

**Bug fixes:**

- Signal generator: AM/FM modulation stops when pressing navigator keys
- Circuit models: make Q readings positive regardless Rs sign
- Resetting to factory defaults from modes different to Scalar Chart cause wrong main menu display

**v0.9.0 - Release date: Nov 17<sup>th</sup>, 2016****New features:**

- Single Frequency: new "Data" display mode

**Enhancements:**

- Several user interface enhancements
- Settings stored automatically when changing mode

**Other:**

- Simplified version numbering scheme

### 3 Release series 0.8.7.x

**v0.8.7.10 - Release date:** Nov 1<sup>st</sup>, 2016

**Enhancements:**

- Smith Chart: updates previous modification, plotted values with  $|\text{Rho}| > 1$ , so that readings out of range do not overlap outer circle.

**v0.8.7.9 - Release date:** Oct 22<sup>nd</sup>, 2016

**Enhancements:**

- Band Scan: improved sweep speed and quicker button response.
- Smith Chart: plot values with  $|\text{Rho}| > 1$  on the outer circle –before they were not plotted.

**Bug fixes:**

- Wrong Voltage and Current values when invoking detector calibration from Band Scan mode.

**v0.8.7.8 - Release date:** Oct 9<sup>th</sup>, 2016

**Enhancements:**

- Measured reflection coefficients  $> 0\text{dB}$  no longer forced to zero –same for negative resistance values.
- Enhancements in auto scale operation.

**v0.8.7.7 - Release date:** Aug 31<sup>rd</sup>, 2016

**Bug fixes:**

- OSL Profile naming: blank space can only be accessed in forward direction.

**v0.8.7.6 - Release date:** Aug 18<sup>th</sup>, 2016

**Bug fixes:**

- Left over green dots above grid lines in some rare conditions.

**v0.8.7.5 - Release date:** July 5<sup>th</sup>, 2016

**Bug fixes:**

- Wrong Z equivalent calculation for Circuit Model capacitor.

**v0.8.7.4 - Release date: June 25<sup>th</sup>, 2016****Enhancements:**

- Smith Chart trace display in two colors to allowing differentiating center frequency.
- Allow editing an optional name to calibration profiles.
- Added the calculation of the impedance at the operating frequency from the mode for Circuit Model inductor and capacitor. Also, it checks the consistence with the measured value and display a warning message if there is a high deviation.
- New remote control command to get the disk volume name.
- Display disk volume name in About dialog.

**v0.8.7.3 - Release date: May 24<sup>th</sup>, 2016****Bug fixes:**

- Buzzer always enabled after power on regardless setting

**v0.8.7.2 - Release date: May 16<sup>th</sup>, 2016****Bug fixes:**

- Removed unnecessary indicators in status line in Band Scan mode

**v0.8.7.1 - Release date: May 9<sup>th</sup>, 2016****Bug fixes:**

- Signals at certain frequencies not detected in Band Scan mode
- Garbage in plot when switching from Band Scan to Scalar or Smith Chart mode

**v0.8.7.0 - Release date: May 8<sup>th</sup>, 2016****New features:**

- Band Scan mode
- Added AM and FM modulation to Signal Generator Mode

## 4 Release series 0.8.6.x

**v0.8.6.19 - Release date:** March 13<sup>th</sup>, 2016

**Enhancements:**

- Circuit Model crystal function now requires the input of the estimated bandwidth, so it can work both with crystals and ceramic resonators.
- Field mode: larger display of the reading at the centre frequency and swaps position with Max/Min values.
- VSWR reading shown in red if value is > 2.0 in Field and Single Frequency modes.

**v0.8.6.18 - Release date:** February 21<sup>st</sup>, 2016

**Enhancements:**

- Improvements in Circuit Model crystal function. Tested to work with crystals of frequency down to 1MHz.

**v0.8.6.17 - Release date:** January 26<sup>th</sup>, 2016

**Bug fixes:**

- Differences when plotting  $|Z_s|$  in Sark Plots compared with the device when measuring high-Q components (e.g. crystal measurements at the resonant frequency) due to the clipping of impedance values greater than 100k. This difference is observed on the device as well, when saving and then loading the data.

**Enhancements:**

- Automatic adjustment of the number format for impedance values ( $Z_s$ ,  $R_s$ ,  $R_p$ ,  $X_p$ ) in Single Frequency mode.

**v0.8.6.16 - Release date:** January 16<sup>th</sup>, 2016

**Enhancements:**

- Circuit model Crystal:
  - Resonant frequency not detected for crystals of frequency below  $\approx 2$  MHz
  - Optimized scan by adjusting parameters based on specified frequency
  - Improved transfer of the detected frequencies to the sweep parameters: sets sweep range so  $F_s$  and  $F_p$  are both seen on the chart. M1 set to  $F_s$  and M2 set to  $F_p$ .
  - Allows the user cancelling the scan process
  - When the resonance was not found junk data was stored in the file

- Revised implementation of the Automatic Power Off feature
- For circuit models Coil and Capacitor, the minimum scan frequency will be set to the specified operating frequency for optimized scan

**Bug fixes:**

- Marker to center feature not working consistently with the new markers behaviour
- When saving data in TDR mode, the user is prompted to enter a second file name (.csv)

**v0.8.6.15 - Release date: January 5<sup>th</sup>, 2016****New features:**

- Zoom feature in Smith Chart mode
- Capability to enable or disable individual charts in multiband mode
- Capability to save and load data in multiband mode
- Configurable average samples number in Computer Controlled mode

**Enhancements:**

- Markers stay at the same frequency when changing frequency or span
- Markers move one step (instead two steps), unless holding navigator key is pressed
- Recall changed file base name when saving files
- Show descriptive text for transmission on/off status in signal generator mode

**Other:**

- Changed compiler version

**v0.8.6.14 - Release date: November 13<sup>th</sup>, 2015****Enhancements:**

- Smith Chart enhancements:
  - Added constant reactance circles.
  - Added choice of VSWR circle, constant-Q lines or none.
- Added Marker to center feature: «MarkerN»<F. to Center>

**v0.8.6.13 - Release date: October 31<sup>st</sup>, 2015****Enhancements:**

- For sweep modes, added the capability to enter the frequency range as center&span or as start&stop frequencies.

Operation: use Navigator A to highlight **Freq** or **Span** in the main menu and then press this Navigator to change the entry mode. These main menu options will change to display «**Start**» and «**Stop**». Pressing the Navigator again will revert to the «**Freq**» and «**Span**» entry mode.

- Added other shortcuts:
  - **Marker1** + Press Navigator A: equivalent to «**Marker1**» «*Info*»
  - **Marker2** + Press Navigator A: equivalent to «**Marker2**» «*Info*»
  - **File** + Press Navigator A: equivalent to «**File**» «*Save Data File*»
- Removed the center dot in the digit '0' of the fonts and minor enhancements in some displays.
- Automatic saving of the analyzer's state on automatic power-off.

#### **v0.8.6.12 - Release date: September 21<sup>st</sup>, 2015**

##### **Enhancements:**

- Added markers info text box: «**MarkerN**»«*Info*».
- Displays complete frequency value in markers bar if automatic tracking is not set.

#### **v0.8.6.11 - Release date: September 7<sup>th</sup>, 2015**

##### **Enhancements:**

- Issues a beep at the end of a trace sweep when in single shot mode.
- Single mode: Clarifies the symbols in the diagram to Rs, Cs, Rp, Cp. Separating the expression for parallel Z.

#### **v0.8.6.10 - Release date: September 1<sup>st</sup>, 2015**

##### **Bug fixes:**

- When viewing a saved TDR plot and zoomed, the plot disappears five seconds later.

#### **v0.8.6.9 - Release date: August 25<sup>th</sup>, 2015**

##### **Enhancements:**

- Reduces ripple in the measurements (but slightly slower sweep speed).

#### **v0.8.6.8 - Release date: July 25<sup>th</sup>, 2015**

##### **Bug fixes:**

- Inductance units not display properly in matching networks; e.g. mH instead uH.

**v0.8.6.7 - Release date:** July 10<sup>th</sup>, 2015**Bug fixes:**

- Differences in readings after upgrading from version v0.8.4 without performing OSL calibration. Changed so it is not necessary to re-calibrate after the upgrade.
- Single frequency mode - two elements circuit model: C and L values not correctly erased (bug introduced in v0.8.6.5).

**v0.8.6.6 - Release date:** June 27<sup>th</sup>, 2015**New features:**

- Added the ability for formatting the disk in «**Setup**»«*Restore Factory Defaults*».

**Enhancements:**

- Frequency calibration did not persist after firmware updates. Frequency calibration setting now stored in file **detcilib.dat**

**v0.8.6.5 - Release date:** June 21<sup>st</sup>, 2015**New features:**

- Added “Matching Networks” display to Single Frequency mode.

**v0.8.6.4 - Release date:** June 7<sup>th</sup>, 2015**New features:**

- Added “Big VSWR” display to Single Frequency mode.

**v0.8.6.3 - Release date:** May 31<sup>st</sup>, 2015**Bug fixes:**

- Transmission line add/subtract not working (from v0.8.6.0).

**v0.8.6.2 - Release date:** April 6<sup>th</sup>, 2015**Bug fixes:**

- Incorrect db/100ft calculation in model transmission line.

**v0.8.6.1 - Release date:** April 3<sup>rd</sup>, 2015**Bug fixes:**

- Auto scale: scales change based on measured values, but the trace is not redrawn in the new scale. It is necessary to run a second trace.

**v0.8.6.0 - Release date:** April 1<sup>st</sup>, 2015

**New features:**

- New sampling mode: <Normal / low resolution>. This is the fastest sweep mode, but with lower resolution.
- Added Setup menu option for selecting units in meters or feet.

**Enhancements:**

- Added 1<sup>st</sup> octave and 1<sup>st</sup> sixteenth Zoom options to Cable Test mode.
- Extended the frequency range in signal generator mode down to 1 kHz
- “TL Len” now can be specified in millimetres, so allowing compensating small port extensions
- Improved Detector Calibration:
  - Requires only a short load for the process
  - Improved measurement accuracy (RS and VSWR) when measuring overly reactive loads. Note that OSL calibration should be done afterwards for maximum accuracy
  - Optional Detector Test at the end of calibration.
- Identification of firmware variants (LF, 200 MHz) for SARK Plots
- Adjusted some cable coefficients
- Field mode: added selected parameter and impedance readings at center freq.
- Improved the speed of the Crystal Circuit Model function
- Circuit models: save measurements in tabular format

**Bug fixes:**

- “custcab.txt” does not accept coefficients with negative values
- Frequency axis not meaningful for frequency steps in the kHz range (LF firmware)
- Multiband mode: selected band highlight overlaps slightly the main menu
- Field mode: points can be plotted above upper graph limit
- Detector Calibration not working properly if Sampling is set to <Double / slow>



## 5 Version 0.8.4

**v0.8.4 - Release date:** August 8<sup>th</sup>, 2014

### **New features:**

- Setup menu:
  - Buzzer enable/disable control: **«Setup»«Buzzer»**
  - Backlight brightness setup: **«Setup»«Backlight»**
  - Programmable run mode: **«Setup»«Run Mode»** continuous or single shot
  - Implemented screen rotation: **«Setup» «Rotate Screen»**
  - Added following cables: URM43, URM67, Westflex 103, Aircell 5, and Aircell 7
  - Saves current selected option in the Setup menu
- Implemented Circuit Models function: **«CModel»** menu option in Single Frequency mode:
  - Determination of equivalent circuit of small loop antennas or coils and capacitors
  - Quartz crystal circuit equivalent circuit
  - Transmission Line circuit model feature: determines automatically Z<sub>0</sub>, V<sub>F</sub> and matched losses
- File menu:
  - Added deep sweep save function: **«File»«Deep Sweep Save»**, including self-timed save feature
  - Removed the restriction of 50 files when saving data (only restricted by available memory), and increased from 50 to 100 the maximum number of files in a listing (e.g. Load Data File menu)
  - Changes in the load data file feature to accept files with non-standard number of data points
  - Improvements in the file name generation for file save modes
  - Reduces the disk usage of screenshot bitmaps (by four or by two depending the number of colors)
- OSL calibration:
  - Added the possibility of specifying the frequency range for calibration
  - Increased the number of calibration points from 256 to 400
  - Added ability to select up to eight OSL calibration profiles. Profile can be selected in the Setup menu: **«Setup» «Calibration»«OSL Profile Select»**
  - Display of the calibration profile data

- Allows user cancelation during calibration
- Detector calibration:
  - Added the visualization of the raw voltage and current detector values and load good status. This feature will be useful for diagnosis and for verification of the calibration loads
  - Optimized the execution time
  - Allows user cancelation during calibration
- Status line:
  - Rearranges status line to show full resolution frequency value.
  - New information in status line: OSL profile number, filter and sampling (when selected)
  - Improved visibility of the calibration icon
- Improved legibility of current selected option in the popup menus
- Lowered the minimum span range down to 1 kHz, for better visualization of high Q circuits as crystals
- Fixed minor compatibility issue with hardware supporting 5kHz low-freq limit
- Improved display driver performances
- Colours of values in marker information bar adjusted to match the colour of axis
- More consistent presentation of impedance values in marker information bar in Smith Chart mode
- Increased user wait timeout to 5 minutes.

**Bug fixes:**

- DDS not powered off in automatic power-off, only in Signal Generator mode
- Right Y axis legend not correctly redrawn when marker overlaps
- Fix some minor issues in right axis legends presentation in the scalar chart, when auto scale is activated

## 6 Version 0.8.2

*v0.8.2 - Release date: Jan 22<sup>nd</sup>, 2014*

### ***New features:***

- Added cable loss parameter (CL) for the measurement of cable insertion losses

### ***Enhancements:***

- Updated template scale files to support new CL parameter
  - (SARK110\_SETTING\_FILES\_v1.01.zip)
- Reduces RL range for the high scale

### ***Bug fixes:***

- Automatic scaling not properly working when opening stored files
- In Scalar Chart mode with automatic scale and one of the traces disabled, the disabled trace was displayed
- In Signal Generator mode the Run/Hold [▶||] button and level selection did not properly work in continuous mode

## 7 Version 0.8.1

*v0.8.1 - Release date: Dec 28<sup>th</sup>, 2013*

### ***New features:***

- Transmission line Add and Subtract feature
- Programmable signal generator mode
- Multi-band mode
- Automatic scaling option
- Added ability to modify the default scale settings via special text files stored into the device disk
- Added capability to modify the default band presets via a special text file stored into the device disk
- Setup menu:
  - Added Color Themes
  - Added Plot Thickness
  - Added Sampling
  - Added new cable presets
  - Implemented the ability to add three custom cable settings
  - Implemented the capability to specify a custom value for the reference impedance

### ***Enhancements:***

- Different legibility and presentation enhancements
- Added new band presets
- Added automatic display of maximum and minimum values in the graph in Field Mode
- New "Load Bitmap File" option in the «File» menu
- Added ability to store or load the measurements in Cable Test mode
- Implemented a basic zoom feature in the Cable Test mode
- Changed Computer Control mode from the «Setup» menu to the «Mode» menu
- Added check of load condition for OSL calibration
- Improvements in the USB HID driver for Windows 8 compatibility

### ***Bug fixes:***

- Setting a largely different frequency value in Frequency Calibration causes the Single Frequency mode to crash
- Forbidden characters were allowed for file names

- Colors in the screenshots bitmaps were not accurate when displayed on the PC. Bitmap header did not include the RGB565 masks so they were display as RGB555
- User cancelation in markers menu was not managed properly in nested submenus

***Internal Notes:***

- Integrated FatFs module R0.10 (previous R0.07e)

## 8 Version 0.7.5

**Release date:** June 26<sup>th</sup>, 2013

**Enhancements:**

- The device displays different impedance readings if changed Z0: This behaviour is due to that the Z0 parameter is taken both for the OSL calibration and for the post-processing of the impedance data. If the Z0 setting used when calibrating is different as during operation, the OSL algorithm introduces errors that are more noticeable with increased frequencies. Changed the implementation so the Z0 setting used during OSL calibration is stored for further measurements regardless the Z0 setting.
- Added more cable settings.
- Several changes to the Filter functionality:
  - Existing Average filter renamed as Smoothing filter
  - Added a four samples Averaging filter (slower sweep speed)
  - Changed filter default to disabled

## 9 Version 0.7.4

*Release date: March 16<sup>th</sup>, 2013*

***New features:***

- Implemented the computer controlled mode through USB custom HID mode
- Implemented composite class USB driver: Mass Storage plus custom HID
- Added VSWR audio feedback to the single frequency mode

***Enhancements:***

- Implemented cycling through submenus
- Added two new presets: "Full HF" and "Full Span"
- Added the ability to configure the size of the constant SWR circle in the Smith Chart. This new setting is accessible at <Setup><SWR Circle>
- Presents information dialog box in case of disk full
- Rearranged the <Setup> menu
- Changed impedance and reactance ranges in the low scale
- Added new VF cable presets

***Bug fixes:***


- In the cable test mode, the step response was not presented correctly.
- Further improvements in the OSL calibration algorithm implementation

## 10 Version 0.7.3

**Release date:** January 25<sup>th</sup>, 2013

**Bug fixes:**

- The measurements with high impedance value loads exhibit a significant variation with the frequency. The screen capture below on the left side shows a measurement of the 1000-ohm load at full span in the v0.7.2 release. This was due to calculations in the OSL compensation algorithm, with near limit values that lead to truncation and then amplifying the errors. The screen capture on the right sides hows the measurement with the same load and the corrected firmware.

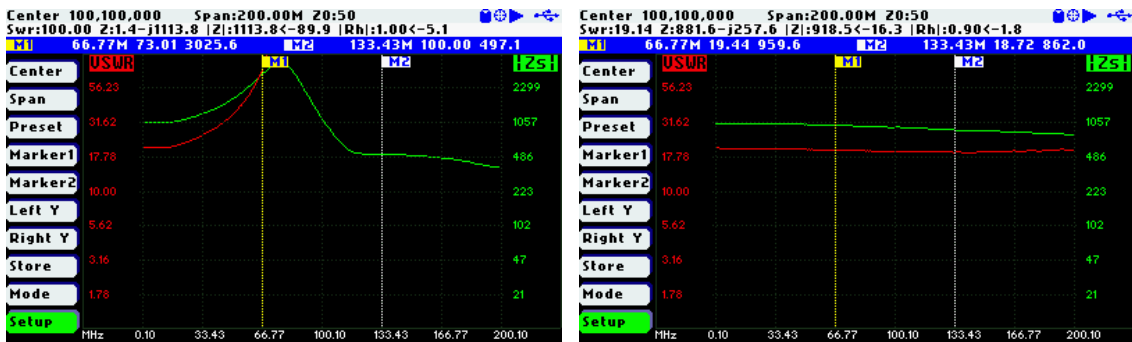



## 11 Version 0.7.2

**Release date:** January 6<sup>th</sup>, 2013

**New features:**

- Added the Field Mode: in this mode, the measurement results are plotted in a chart similar to the standard “Rectangular Chart” mode but with a more visible presentation aimed for the operation on the field.

**Enhancements:**

- Improved the look and field of the menus: implemented rounded rectangles with a shadow effect for most of the GUI controls, added a title for the submenus, and improved the look of the edit controls.
- Improved the visibility of the plot in Smith Chart mode

**Bug fixes:**

- In Smith Chart mode and plotting a stored file, when moving the markers over the central circle, the central circle was not correctly refreshed.

## 12 Version 0.7.1

*Release date:* December 14<sup>th</sup>, 2012

***Enhancements:***

- Extended the frequency upper range to 230 MHz

***Warning:***

- **It is required performing Detector Calibration and OSL calibration when upgrading to this release from previous versions. Do not upgrade to this version if you don't have the proper calibration loads**

## 13 Version 0.7.0

**Release date:** December 14<sup>th</sup>, 2012

### **Enhancements:**

- Reorganized the traces menu and added new traces. The available traces are the following: Rs, Xs, Rp, Xp, |Zs|, <Zs, VSWR, RL, |Rho|, <Rho, %Ref Pwr, Q, Cs, Ls, Cp, and Lp
- Changed the measurement representation in the Detailed Measurements window to a more consistent format, displaying the VSWR, the impedance in rectangular and in polar form, and the reflection coefficient in polar form. Example:
  - Swr:10.09 Z:504.5+j2.1 |Z|=504.6<0.2 |Rho|:0.82<0.0
- Added ability to disable the traces in the rectangular chart. This option is available in the LeftY and RightY menu.
- Navigation keys center (push) actuator functional
- Added a moving average filter for the rectangular and Smith chart diagrams. The filter could be enabled or disabled by accessing to the <Setup><Average Filter> menu option.
- Improved the values range limits checking
- Adjusted slightly the Scale limits presets
- In Single Frequency mode the inductance or capacitance graph will be shown only if the reactance (X) is higher than 2.0.
- Improved values range checking when reading ZPlots files
- Renamed “Antenna Test” in the mode menu by “Rectangular Chart”
- Renamed “Single” in the mode menu by “Single Frequency”

### **Bug fixes:**

- The calculated inductance values in the Single Frequency mode were incorrect; the actual value was 1000 times less than the presented value.

## 14 Version 0.6.6

*Release date:* July 26<sup>th</sup>, 2012

Initial production release

## 15 Upgrading the Firmware

The SARK-110's firmware may be upgraded via USB as described in the following steps. This procedure assumes you have downloaded the appropriate update file from: <http://www.sark110.com/files/firmware>

The downloaded file has the following format:

SARK110-APP-x.y.z.dfu.zip    Where x.y.z is the incremental version number.

The downloaded file has to be unzipped to produce an update file in the format:

SARK110-APP-x.y.z.dfu

### Procedure:

1. Connect the SARK-110 to the PC with a USB cable
2. Locate the SARK's USB flash drive unit using the File Explorer of your PC
3. Copy the firmware file, e.g. SARK110-APP.x.y.z.dfu to the SARK's USB flash drive unit
4. Do a safe eject of the SARK's USB flash drive unit from your computer
5. Power off the SARK-110 and power it on again while simultaneously holding down the Run/Hold [▶||] button
6. The Device Firmware Upgrade screen prompts you to install the firmware file
7. If several firmware files are on the SARK's USB flash drive unit, use Navigator B to select the file to load
8. The firmware upgrade will commence after pressing the Select [■] button
9. Once complete, press the "Save Conf" [▲] button, which will reset the analyzer and run the upgraded firmware
10. Select «SETUP»«About» and check if the firmware version shown on the screen agrees with the installed one

---

## 16 License Agreement

By downloading, installing, or using the firmware, you agree to be bound by the terms and conditions of the following license agreement. Please read this agreement carefully.

Melchor Varela (EA4FRB) grants you a limited, non-exclusive license to use the SARK-110 firmware ("Firmware") in binary executable form in the normal operation of the SARK-110 products only. Title, ownership rights, and intellectual property rights in and to the Firmware remain in Melchor Varela (EA4FRB). This license is personal to you and you may make copies of the Firmware only for your personal use. You agree that this license agreement does not need to be signed for it to take effect.

You acknowledge that this Firmware is the property of Melchor Varela (EA4FRB). You agree not to decompile, disassemble, modify, reverse assemble, reverse engineer, or reduce to human readable form the Firmware or any part thereof or create any derivative works based on the Firmware.

You agree that the firmware is provided as-is, without warranty of any kind (either express or implied). Accordingly, we make no warranties, representations or guarantees, either express or implied, and disclaims all such warranties, representations or guarantees, including, without limitation, the implied warranties of merchantability and fitness for any particular purpose. We do not warrant the performance of the Firmware or that the Firmware will meet your requirements or operate without errors.